

Cabin Filter Replacement Mazda 6. (2002-07 RHD UK)

Gain access to filter housing by gently bending in the sidewalls of the glove box until the retaining tangs (indicated) are exposed.



Lower the glove box away towards the floor of the car.

The cabin filter housing can now be accessed very easily, note the direction of the airflow arrows this is marked on the lid of the housing (the lid cannot be replaced upside down).



Lift off the lid from the bottom edge with your fingers.

Repalce the filter element making sure that the airflow direction arrows on the filter match the ones on the housing lid.



Thats it, reassembly is reverse of removal as they say.

www.mazda6oc.co.uk